

KBLED41 USB BLE Dongle_181030

- Quick guide

- Part No: 829530

Package Contents

KBLED41 USB BLE Dongle
Quick guide
Connect Barcode

System Requirements

OS: Windows 7/8/10

Specifications

Bluetooth Standards: Bluetooth Low Energy 4.1
Radio Frequency: 2.4 GHz - 2.4835 GHz
Physical Dimensions: 0.87" x 0.59" x 0.21" (22 mm x 15 mm x 5.35 mm)
Weight: 0.07 oz (2.0 g)
Antenna: Internal Chip Antenna
Input Power: 5V (USB bus-powered)
Power Consumption: 5V, 30mA max
Interface: USB 2.0 (HID/Serial)
Transfer Rate: Up to 1.0Mbps
Range: 98 feet (30 meters)
OS support: Windows 7/8/10



 
KOAMTAC

KBLED41 USB BLE Dongle



Quick Guide


1. Insert KBLED41 USB BLE Dongle into your computer.
2. Windows will automatically install "HID Keyboard device" in the Device Manager of Control Panel as pictured below. (Default interface is USB HID)



3. Scan **Connect Barcode** included in this package to connect KDC to KBLED41 USB BLE Dongle.
4. KBLED41 USB BLE Dongle will automatically connect to KDC.
5. KBLED41 USB BLE Dongle can be changed to **USB Serial** mode by scanning below barcode.



 6. KBLED41 USB BLE Dongle is configured as a **COM** port once it has been changed to **USB Serial** mode as pictured below.



7. KBLED41 USB BLE Dongle is changed back to **USB HID** mode by scanning below barcode.



8. Please attach one of the included **Connect Barcodes** to your Windows PC close to **KBLED41 USB BLE Dongle**.

KOAMTAC, Inc.
116 Village Blvd, Suite 305
Princeton, NJ 08540, USA
Phone: +1.609.256.4700
FAX: +1.609.228.4373
email: info@koamtac.com
www.koamtac.com