KOAMTAC

USER GUIDE

SONIM XP6 & XP7

sonim
BUILT FOR LIFE™

KOAMTAC
CORPORATE HEADQUARTERS
116 Village Blvd, Suite 305
Princeton, NJ 08540, USA
Phone: +1.609.256.4700, Fax: +1.609.228.4373
Email: support@koamtac.com
For more information, visit www.koamtac.com

SONIM
CORPORATE HEADQUARTERS
1825 S.Grant Street Suite 200
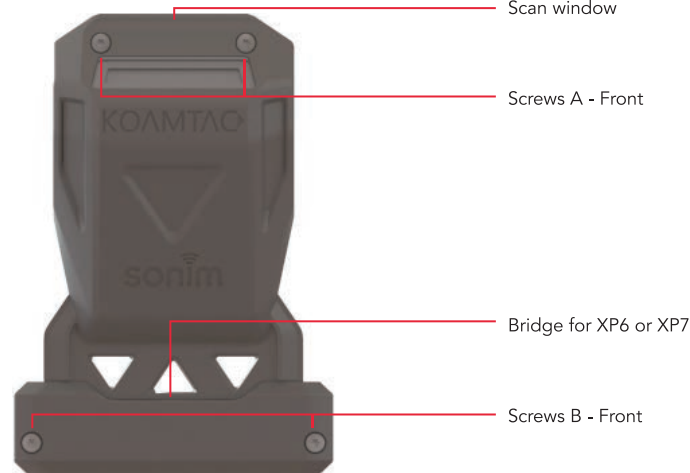San Mateo, CA 94402, USA
Phone: +1.650.378.8100, Fax: +1.650.378.8109
Email: support@sonimtech.com
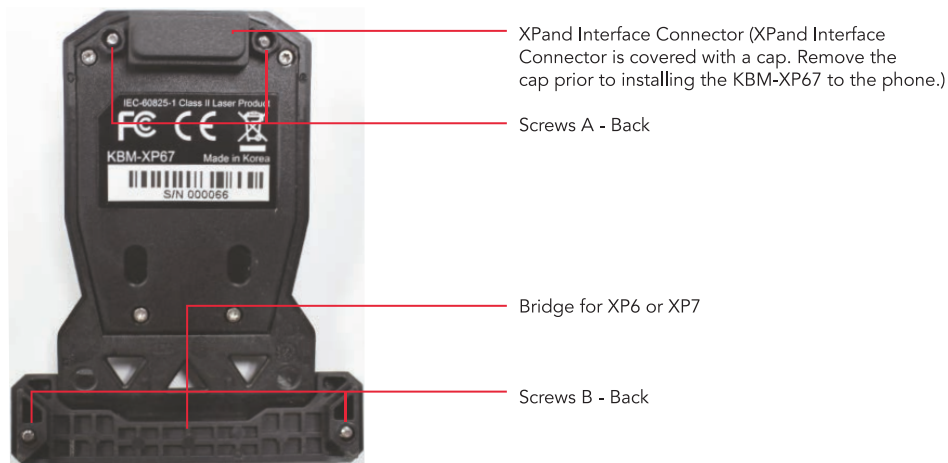For more information, visit www.sonimtech.com

What is in the Box?

- KOAMTAC KBM-XP67 1D Laser Barcode Scanner

  - Assembly for BarBridge for XP6
    (BarBridge for XP6 + Screws 2ea)

  - Assembly for BarBridge for XP7
    (BarBridge for XP7 + Screws 2ea)

Front View

Scan window

Screws A - Front

Bridge for XP6 or XP7

Screws B - Front

Rear View

IEC-60825-1 Class II Laser Product

KBM-XP67   Made in Korea

S/N 000066

XPand Interface Connector (XPand Interface Connector is covered with a cap. Remove the cap prior to installing the KBM-XP67 to the phone.)

Screws A - Back

Bridge for XP6 or XP7

Screws B - Back

Installing the KOAMTAC KBM-XP67 Barcode Scanner

Follow the instructions for installing the KBM-XP67 Barcode Scanner on the compatible XP6 or XP7 phone.
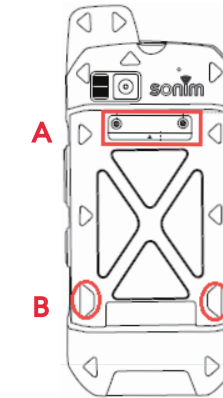
1. Unscrew the top two screws with the multi-tool screwdriver provided in the box with your Sonim XP6 or XP7 mobile phone (sold separately).

   A. Remove the black insert plate.

   B. Remove the two rubber covers on the back of the phone.

2. Using the multi-tool screwdriver, attach the KBM-XP67 Barcode Scanner to the back of phone with Screws A.

3. Using the multi-tool screwdriver, attach the bridge for the XP6 or XP7 to the back of the phone with Screws B.

Note: The BarBridge for the XP7 is wider than the BarBridge for the XP6.

A

B

2

3

KOAMTAC

KBM-XP67
XPAND 1D LASER BARCODE SCANNER

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO ANY TYPE OF MOISTURE. DO NOT LOOK DIRECTLY INTO LASER OR POINT THE LASER INTO ANOTHER PERSON'S EYES. EXPOSURE TO THE BEAM MAY CAUSE EYE DAMAGE.

CAUTION

CAUTION
LASER RADIATION -
DO NOT STARE INTO BEAM
< 1 MILLIWATT LASER DIODE
CLASS II LASER PRODUCT

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

XPand Barcode Scanner Application

Sonim XPand® Barcode Scanner Barcode Scanner Application is compatible with KOAMTAC KBM-XP67 Barcode Scanner, which connects both hardware and software to Sonim's XPand interface on the XP6 and XP7 phones.

Downloading

1. Go to Google Play Store® and download Sonim XPand Barcode Scanner Application on XP7 phone.

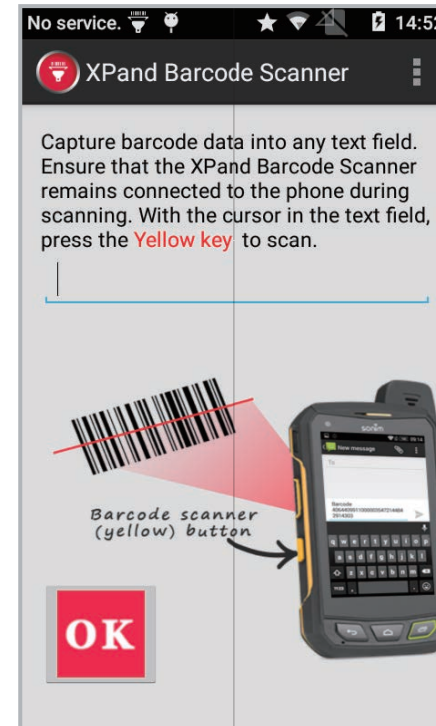   Short link to download from Play Store: https://play.google.com/store/apps/details?id=com.sonim.xpandscanner

2. XPand Barcode Scanner Application icon ( ) is displayed in application list on the phone.

About the User Guide

This user guide provides instructions and screenshots for the KBM-XP67 Barcode Scanner when used with the XP7 phone. Most instructions apply to KBM-XP67 Barcode Scanner when used with the XP6 phone, as well, except the path the access the Settings or Options menu on the XP6 is different from the XP7. To access the Settings Option on the XP6, select Options (RSK) on the XPand Barcode Scanner Application main screen.

Initiating the Scan

From the application menu on the phone, select XPand Scanner icon ( ) and the application start screen will appear:

1. While scanning, point the scanner light directly at the intended barcode to be read.

2. The yellow button (short press) may also initiate a scan.

3. Double press the yellow key to initiate continuous scanning.

4. After a barcode is scanned, the barcode data is captured in the phone text field, in text format.

Special Configuration Barcodes for the KBM-XP67

Factory Default

57001

KDC Reset

A0000

Erase Memory

50003

Enable Auto Erase

5F001